

Hampton Pavilion



Assembly Manual

Hampton Pavilion Assembly Manual

Thank you for your purchase of this pavilion.

This manual is designed to simplify the assembly process, however we recommend having an experienced carpenter involved in the project. Please read through the entire manual before starting!

You have purchased a product that consists of heavy, bulky pieces. With your purchase, you assume full responsibility to have the necessary manpower and/or equipment available to unload the items. You also agree that any damage that happens to the equipment, product, or individuals during the unloading process, or during the entire construction process, is your responsibility, and neither the seller, nor the manufacturer, will be held liable for any such damage.

Tools Required for Job



6' & 10'
Step
Ladders



Rubber
Mallet



Hammer



Ratchet with
9/16" & 3/4"
Socket



Hammer
Drill



1/2" Concrete
Drill Bit



Cordless
Drill



25' Tape
Measure



Utility
Knife



Hammer
Tacker



Paint
Brush



(4) 2x4x8' Long
(2) 2x4 Approx 4' Long
for bracing header assemblies

Parts List



2.1/2" Brown
Screw



3.1/2" Brown
Screw



2" White Head
Screw



2.1/2" White Head
Screw



2" White Pan
Screw



1" Screw



1.1/2" Screw



3/4" Roof Nail



1" Roof Nail



2" 6 Penny Nail



2" & 4" Square Drive Bit



1/2" x 4" Lag Bolt



1/2" x 4.1/2" Bolt



3/8" x 3.1/2" Lag Screw



4 Ply Top Header



Arch Header



Arch Cover



Roof Plate



1x6 T&G Roof Boards




10" Column Post

Parts List Continued




6", 8", & 10" TimberLok Screws

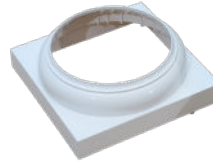


Post Base Trim



Post Ring Trim

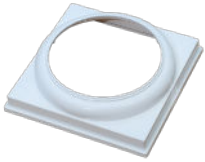

Post Top Trim

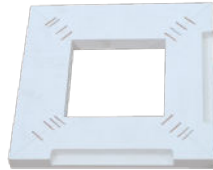

Square Trim



Double Hip Rafter




Single Rafters



Double Ridge Piece




Outside Corner Cover

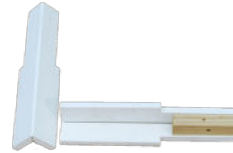

Inside Corner Trim



Asphalt Shingles



Ridge Caps



Touch up Stain
for ceiling



Mr Clean
Cleaning Sponge



Country Lane Name
Plaque w/ Serial #



Set your Hampton Pavilion Package as close to the building site as possible.



Remove protective shrink wrap. Do not unwrap until you are ready to build. Keep dry and protected until you are ready to assemble the Pavilion.


-If you added an Electrical Package continue here. If not, skip to page 6-




Measure 36" up from bottom of Post or, at the desired height where you want your Switch and Receptacle Boxes to be located, make (2) marks spaced 5" apart, centered on Post.



Using a 1/2" drill bit Drill two holes through vinyl sleeve at the marked locations 5" apart.

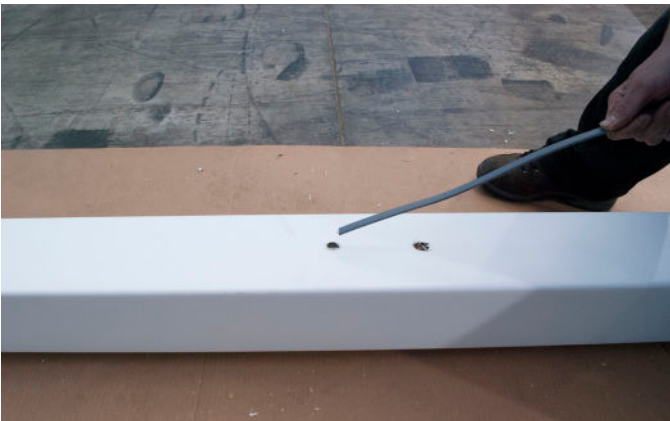

Take one end of the Wire and run it between the Wood Post and the Vinyl Sleeve.
Note: You may have to remove the Post from the Sleeve, run the Wires through the Sleeve, then slide the Post back in the Sleeve.

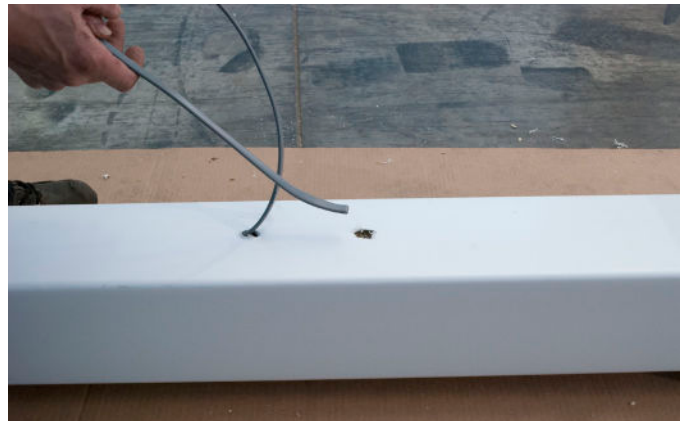

Run the other end of the Wire in the opposite direction .



Twist Wire so Wire does not slip during installation of Pavilion.



Post Wiring complete.

For unit with only 4 Post


If you purchased a unit with only 4 Post, continue here. If you purchased a unit with 6 or more Post, skip to page 10.

Step # 1




Start by placing two 10" Round Columns on floor, use cardboard or something to keep the vinyl clean and from getting scratched.

Step # 3

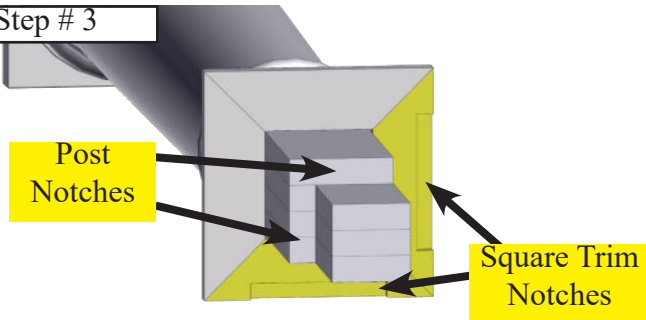


Ensure the Square Trim Notches are opposite the notched section of the Post.
Place Post onto ground with one notch section of the Post facing up and the other notch facing out.

Step # 5

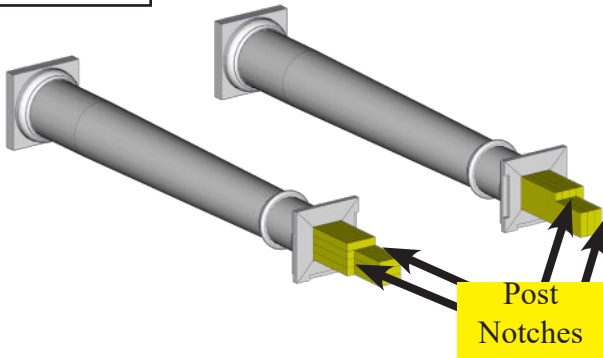

See orientation of the Post notches. Place notches in Post up and towards outside of the Post.

Step # 2

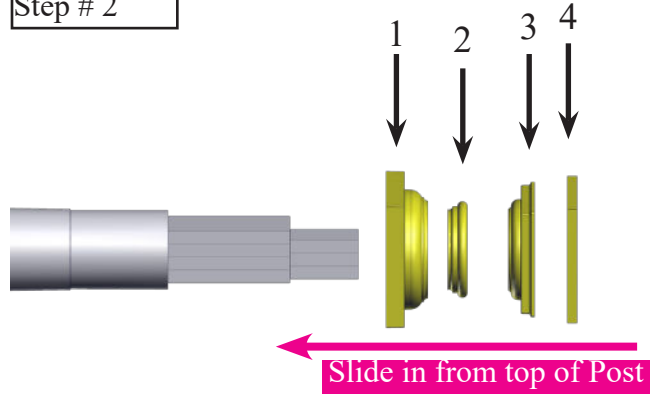


Slide Trim Pieces onto Post from top of Post as shown. 1. Post Base Trim - 2. Ring Trim - 3. Top Trim - 4. Square Trim w/ Notches face up and turned toward the direction of the Headers. (*See orientation of notches on next steps*)

Step # 4




Prepare and place second Post. On a 12x16 start with the 16' Headers first. Any other size start with the longer sides first.

Step # 6

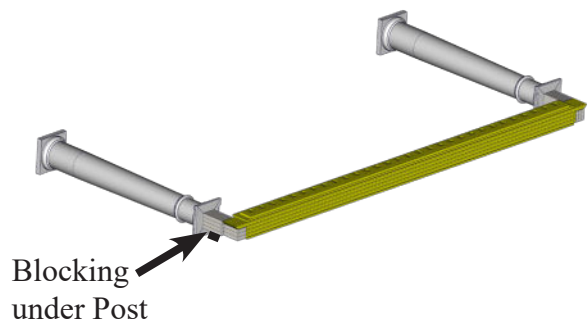


Place the first long Top Header onto the Post. You will need to put a block under the post to keep the weight off of the Post Trim.

Step # 7

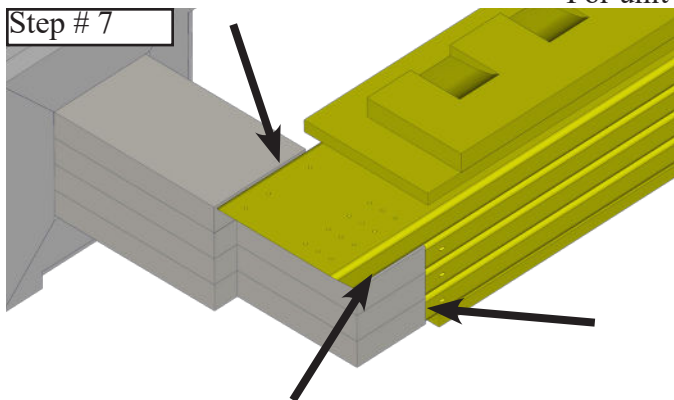


Place the Top Header in the notch on the Post. Be sure the Header is against the Post at the three surfaces shown with arrows.

Step # 8

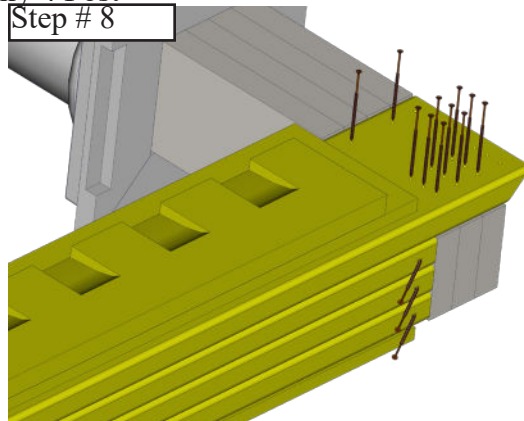


Fasten to Post using 3 1/2" Screws through pre-drilled holes. Fill all pre-drilled holes except the (4) along the edge. These will be used later.

Step # 9

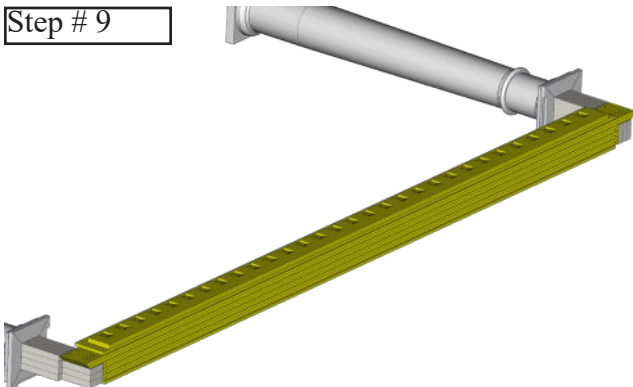


Fasten Top Header to Post at the opposite side.

Step # 10

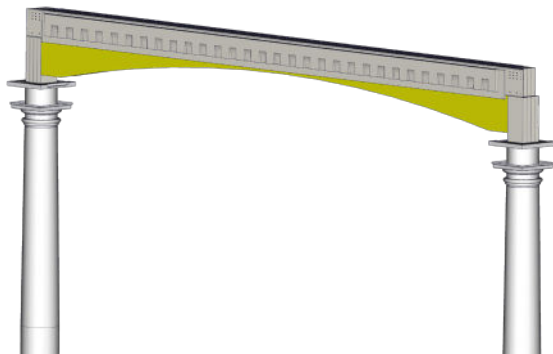

Set the Post and Header assembly upright. Place the Arched Header Section under the Top Header as shown.

Step # 11

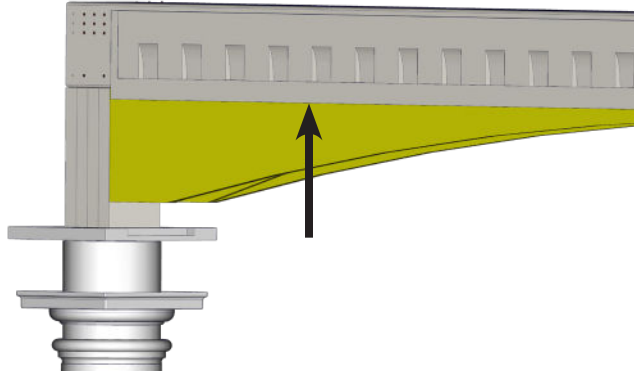

Place the Arched Header Section in between the vinyl of the Top Header.


Step # 12



Fasten to Top Header with Timber Lock Screws through pre-drilled holes. **(See next step for Screw sizes.)**


For unit with only 4 Post

Step # 13

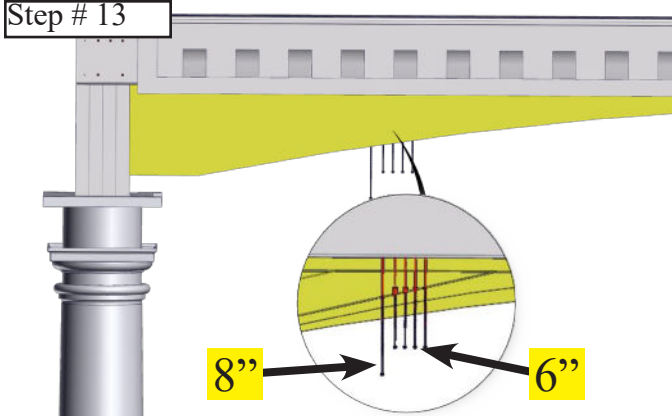


Fasten with (8) 6" Timberlock Screws and with (2) 8" Screws.

Step # 14

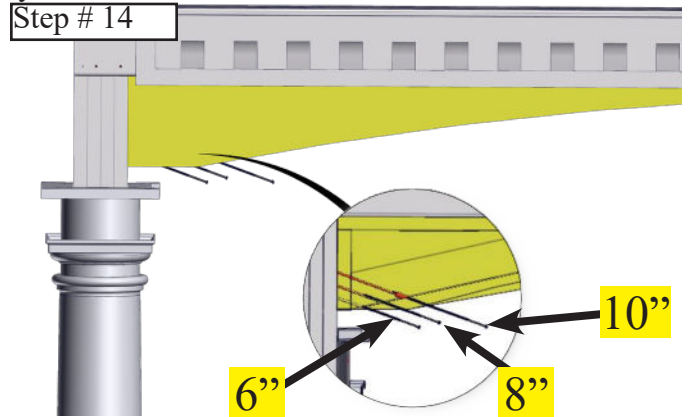

Align the Arched Header Section with the Post. Fasten to Post with (2) 10" Timber Locks, (2) 8" Timber Locks, (2) 6" Timber Locks.


Step # 15

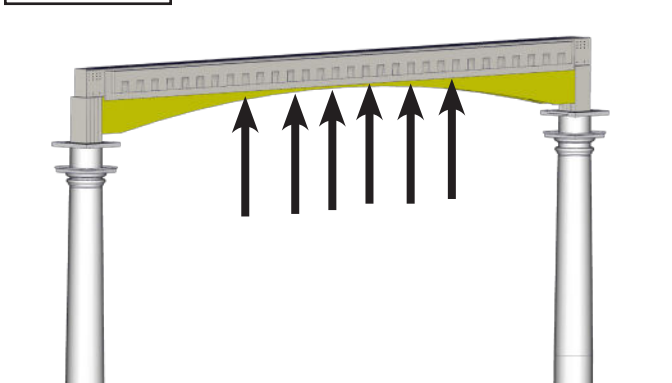

Fill the rest of the holes with 3 1/2 Screws.

Repeat steps 11-14 to fasten the opposite end of the Arched Header Section.

Step # 16

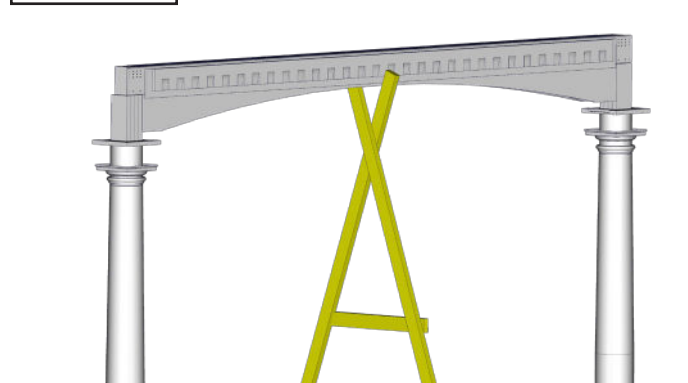


Using your own 2x4s, create an X brace to keep the Header assembly upright.

Step # 17



Repeat steps 1-16 to install the Header assembly opposite of the first.


Step # 18

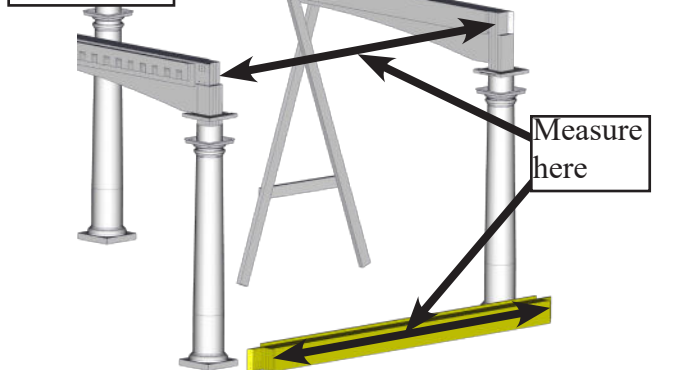

Lay the shorter Header on the ground as shown. Measure the length of the header. Now measure the distance between the 2 Header assemblies. Adjust the Header assemblies to match the dimension from the Header.


For unit with only 4 Post

Step # 19

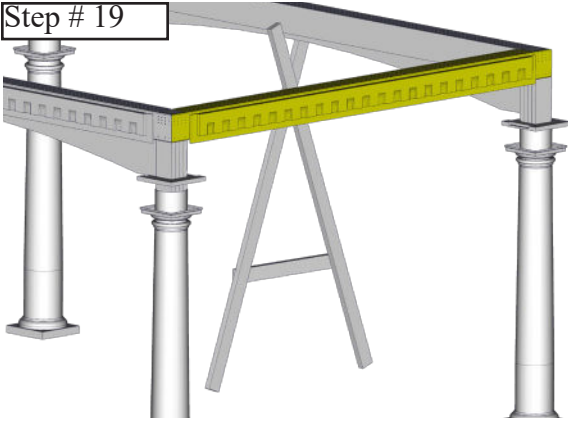


Lift the Header into place.

Step # 20

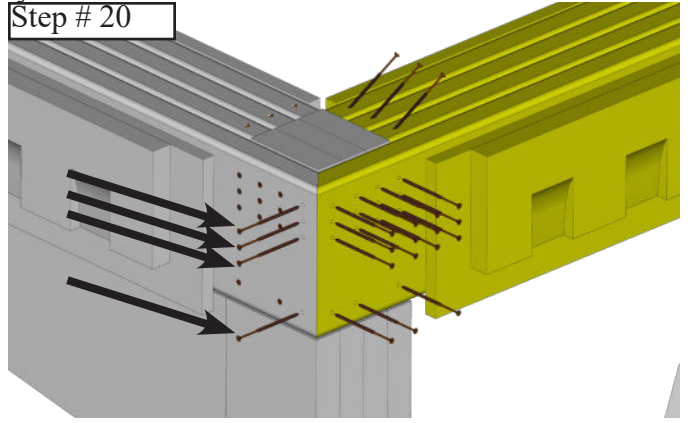


Fasten both ends to Post using 3 1/2" Screws through pre-drilled holes. Fill all pre-drilled holes. Including the holes on the end from the previous Header.

Step # 21

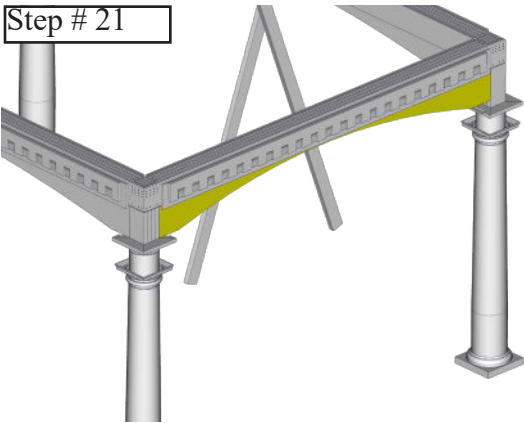

Using steps 11-15, install the Arched Header Section.

Step # 22

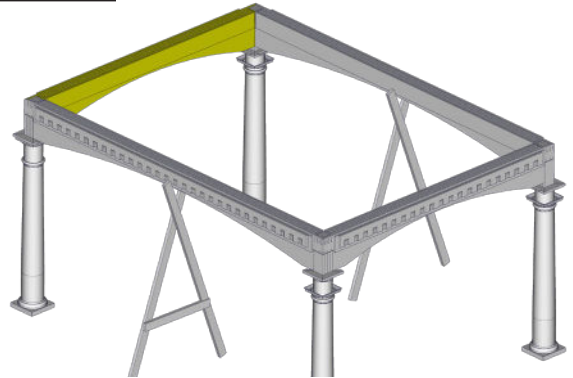


Using previous steps, install the Header and Arched Header Section on the opposite side.

If you purchased a unit with only 4 post, skip to page 18.

For a unit with 6 or more post, start on next page.


For unit with 6 or more Post

Step # 23

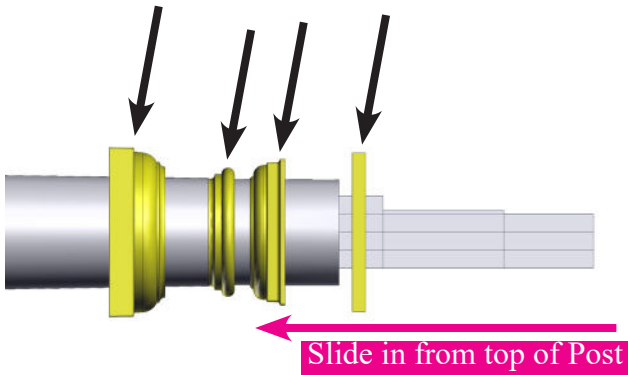


Slide Trim Pieces onto Post from top of Post as shown.
Post Base Trim - Ring Trim - Top Trim - Square Trim with notches. (*See orientation of notches on next steps*)

Step # 24

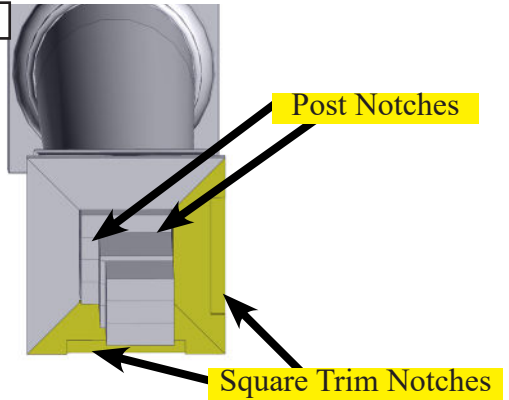


On the Corner Post, The notches on the Square Trim are opposite of the notches on the Post.

Step # 25

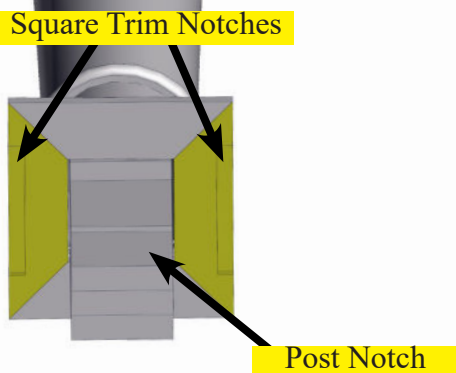


On the Center Post, the notches on the Square Trim go out each side of the Post as shown above.

Step # 26

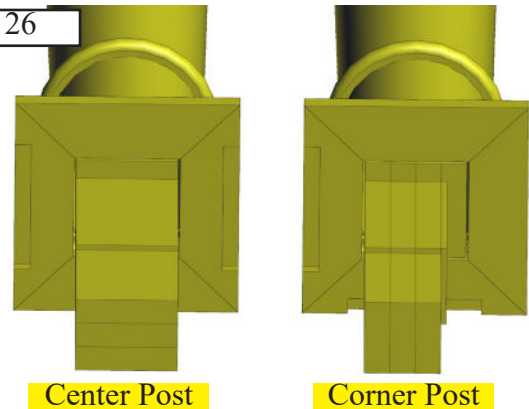


Lay one Corner Post and one Center Post on the ground. Be sure to put on cardboard or cloth to protect from dirt or scratches. Place in the orientation as shown above.

Step # 27

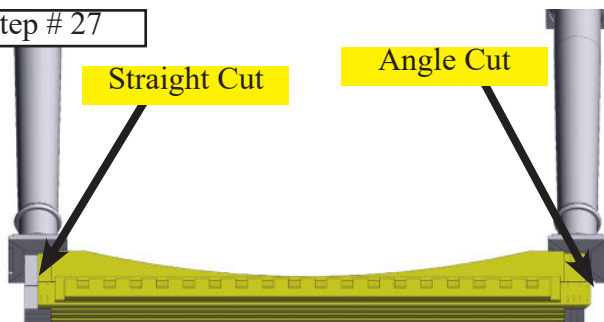

Place the Header and Arched Header assembly onto the notches on the Post. Install the Header with one straight cut and one angle cut. The angle cut goes on the Corner Post. The straight cut on the Center Post.


Step # 28

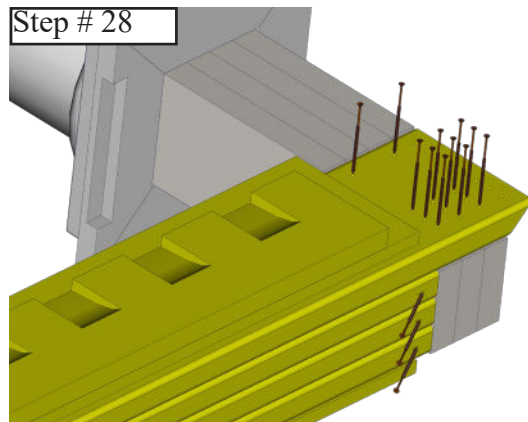

Push the Header Assembly tight against the Post. Fasten the Header to the Post with 3 1/2" Screws through all pre-drilled holes.


For unit with 6 or more Post

Step # 29

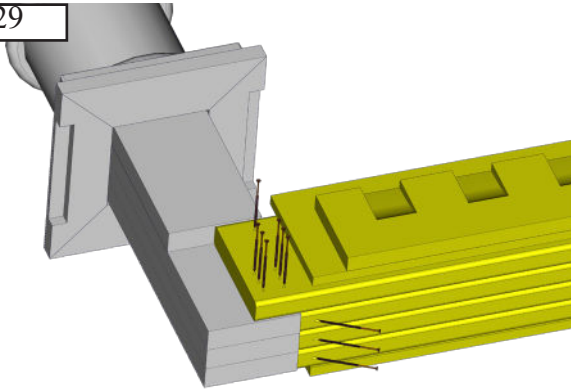


Fasten the opposite end of the Header to the Post with 3 ½ Screws.

Step # 30

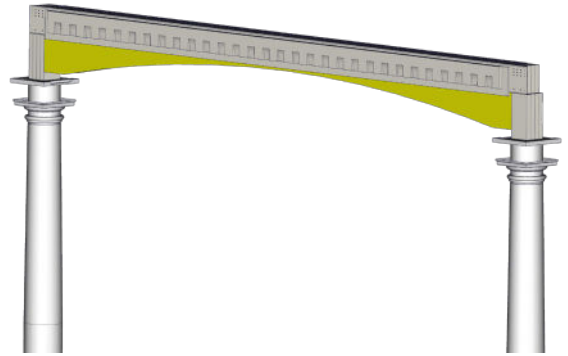


Set the Post and Header assembly upright. Place the Arched Header Section under the Top Header as shown.

Step # 31

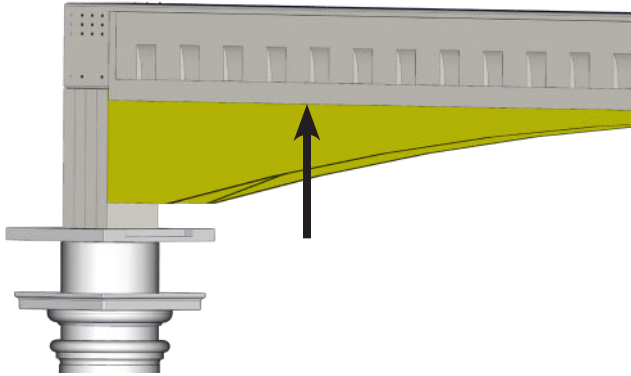


Place the Arched Header Section in between the vinyl of the Top Header.

Step # 32

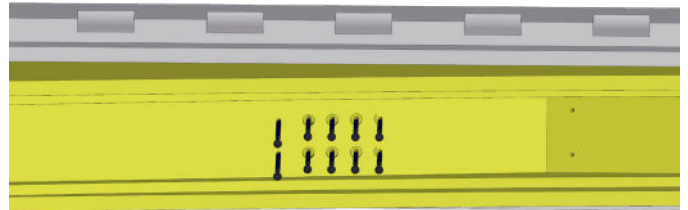


Fasten to Top Header with Timber Lock Screws through pre-drilled holes. **(See next step for Screw sizes.)**

Step # 33

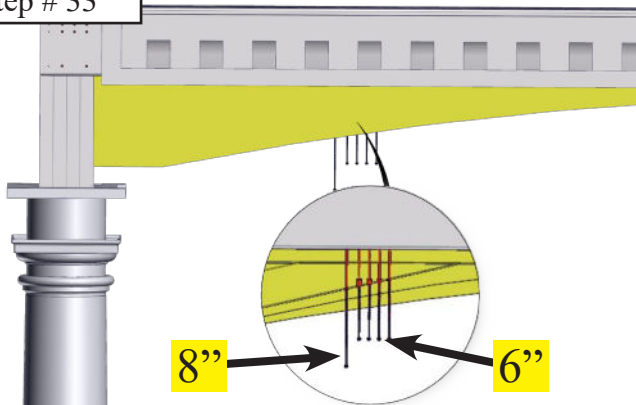


Fasten with (8) 6" Timberlock Screws and with (2) 8" Screws at each end.

Step # 34

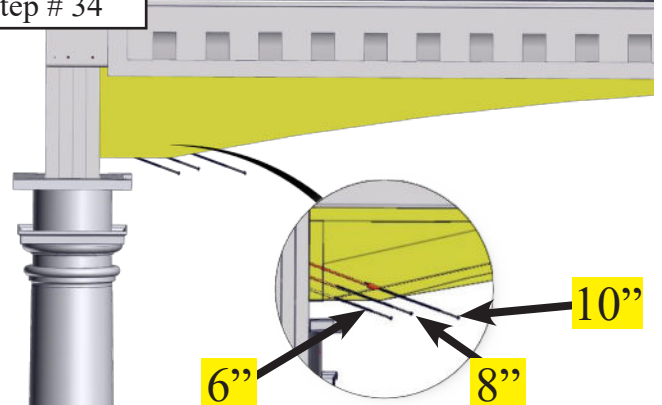

Align the Arched Header Section with the Post. Fasten to Post with (2) 10" Timber Locks, (2) 8" Timber Locks, (2) 6" Timber Locks at each end.


Step # 35

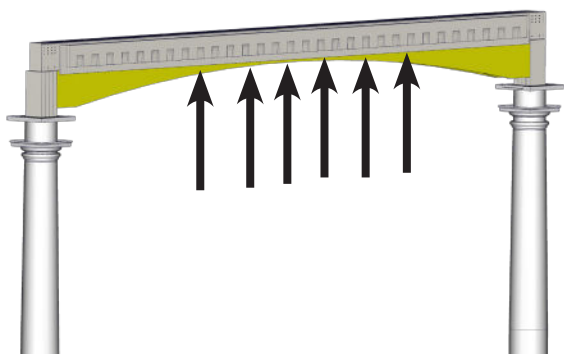

Fill the rest of the holes with 3 ½ Screws.


Repeat steps 11-14 to fasten the opposite end of the Arched Header Section.

Step # 36

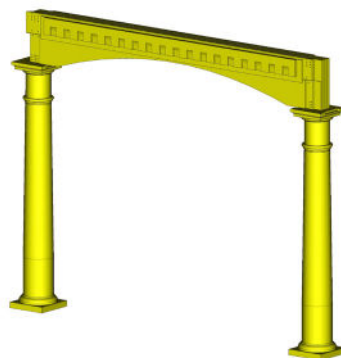


After both sides are properly secured, set Posts & Header assembly into an upright position. Create an X brace as shown on step 16, to hold the Post and Header assembly upright. (X brace is not shown)

Step # 37

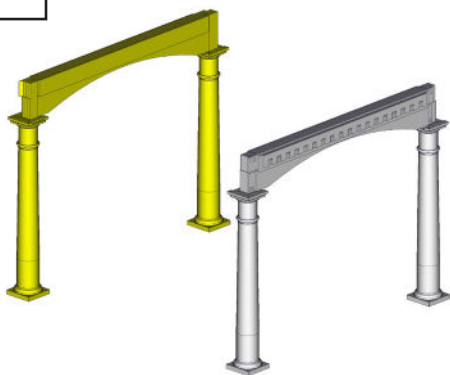


Using steps 23-36, install the Post and Header assembly directly opposite of the first Post and Header Assembly.

Step # 38

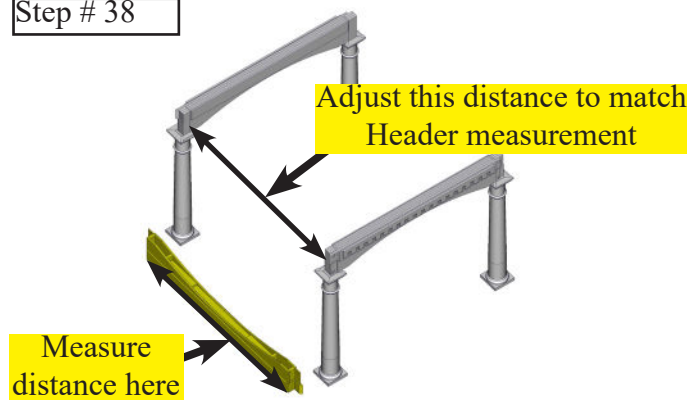


Measure the length of the Header and Arch Assembly. Then measure the distance between the two Post and Header Assemblies. Adjust the distance to match the correct spacing if necessary.

Step # 39

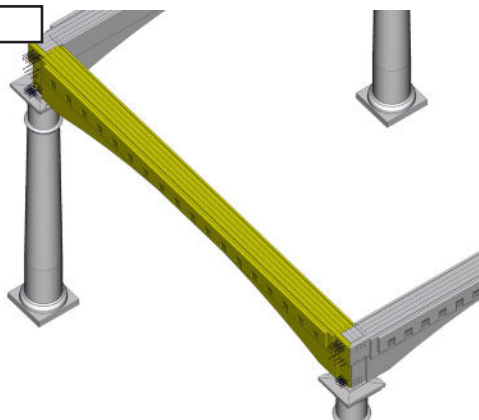


Lift the Header Assembly into place and fasten as shown on steps 28-35. (Including the Arched Header Section)

Step # 40

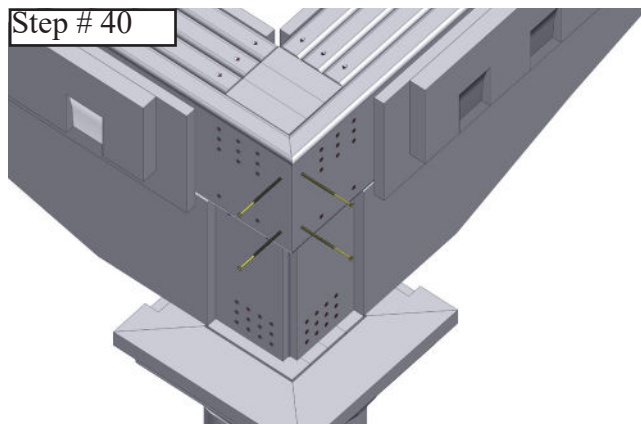


Install the 3 ½" Screws at the corners through the pre-drilled holes as shown above.

Step # 41

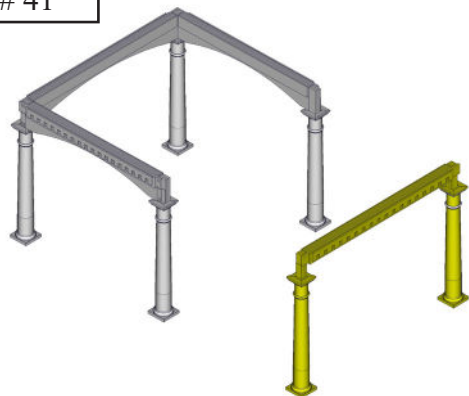


Step # 42

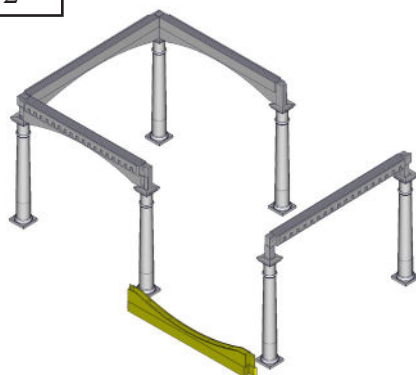


Using previous steps, install the next Post and Header Assembly. Again create an X brace to keep the Header Assembly upright. (X brace is not shown)

Again, measure the Header Assembly and match the distance between the Header and Post Assemblies.

Step # 43

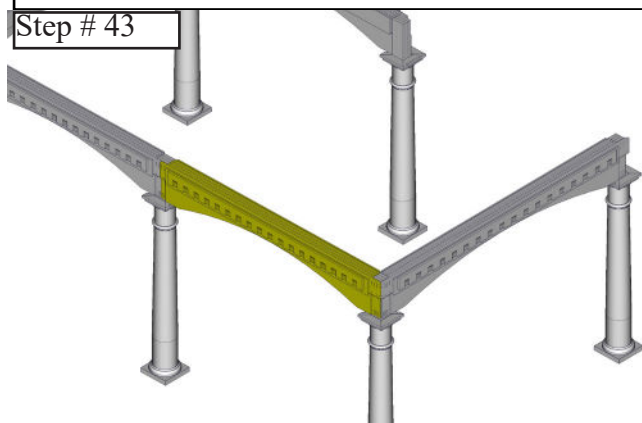


Step # 44

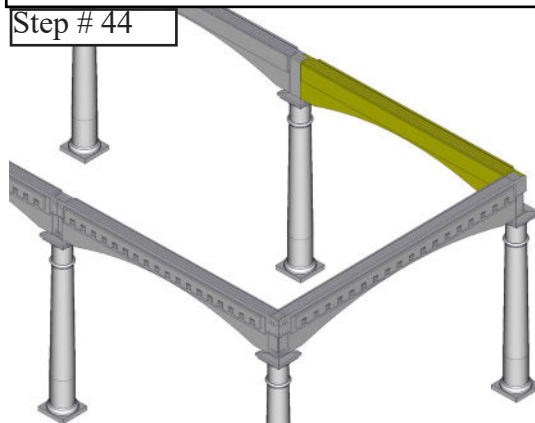


Lift Header Beam into place and fasten as shown in previous steps.

Place the last Header Beam into place and fasten using previous steps.

Step # 45

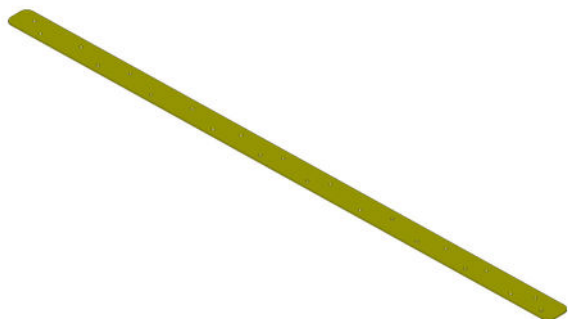


Step # 46

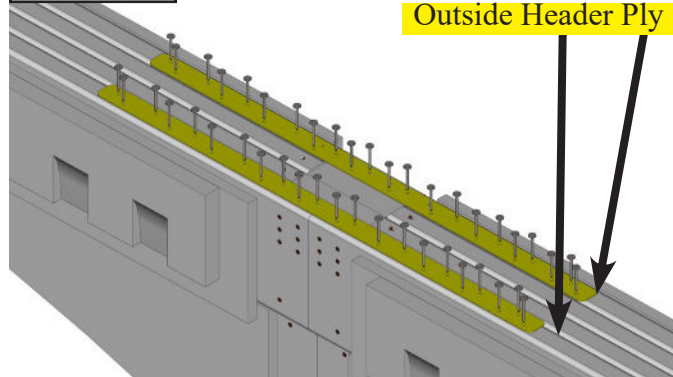

Locate the Simpson Straps. You should have some 18" long and some 30" long.


Install the 30" Simpson Straps at the center post locations. Place one on each of the outside plies of the Header Beam as shown. Fasten with 1 1/2" Nails. (1) through each hole in the Simpson Strap.

Step # 69

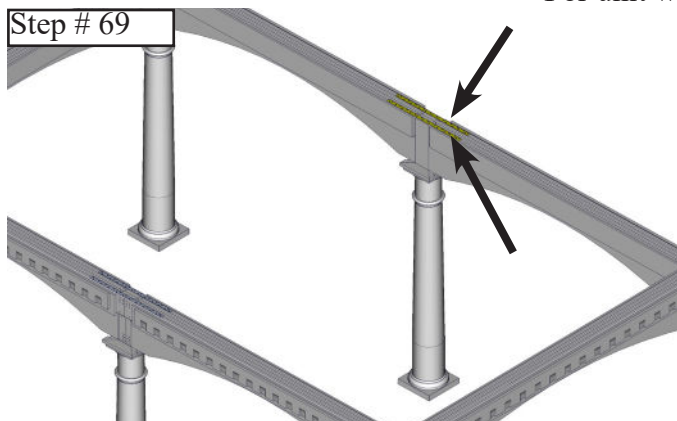


Using previous step, install the 30" Simpson Straps at the other center Post.

Step # 70

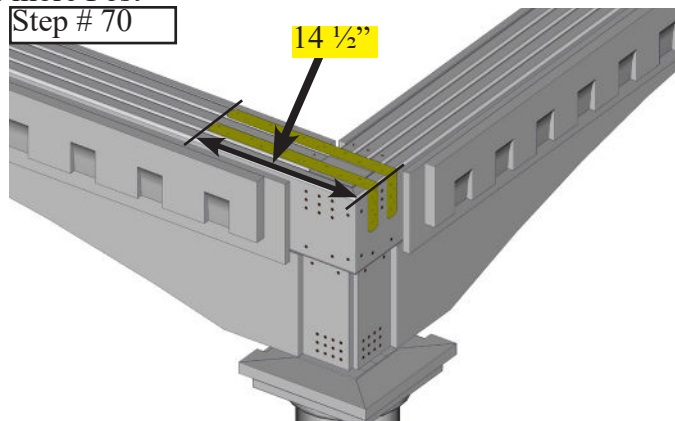


Locate the 18" Simpson Straps. Bend to fit over top of the Header and down the side as shown.

Step # 71

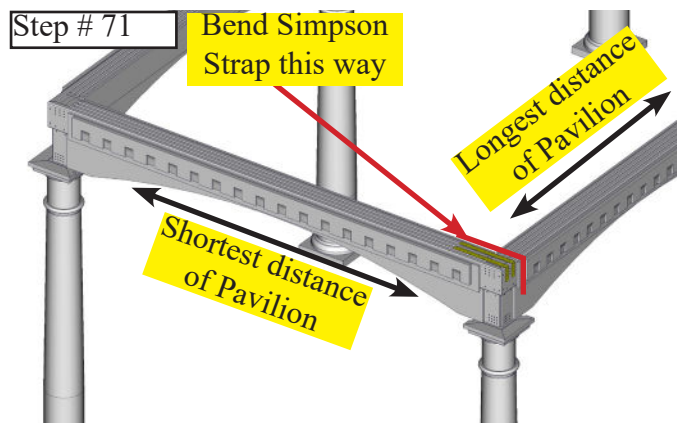


Ensure the Simpson Straps are running the correct way. They are to be installed as shown above.

Step # 72

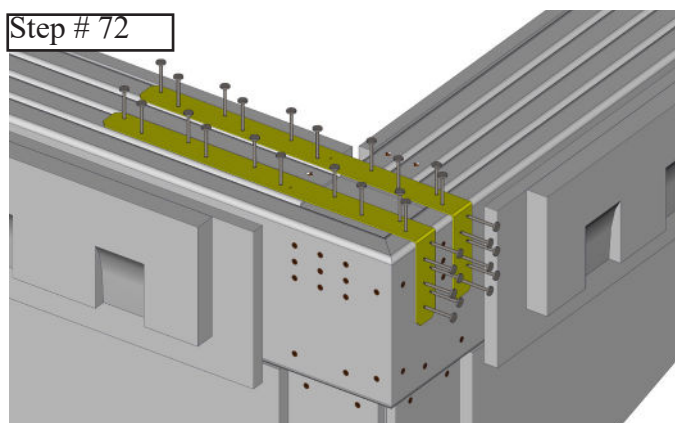


Fasten Simpson Straps with 1 1/2" Nails. Be sure to fill all holes.

Step # 73

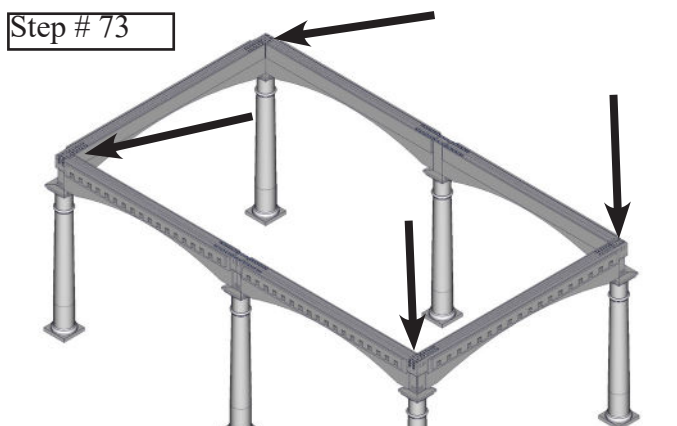

Using steps 70-72, install the 18" Simpson Straps at each corner.


Step # 74

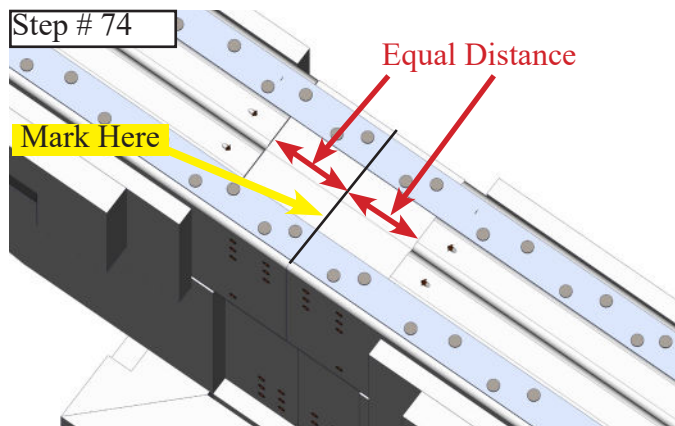

Make a mark at the center of the post at the Center Post location.


For unit with 6 or more Post

Step # 75

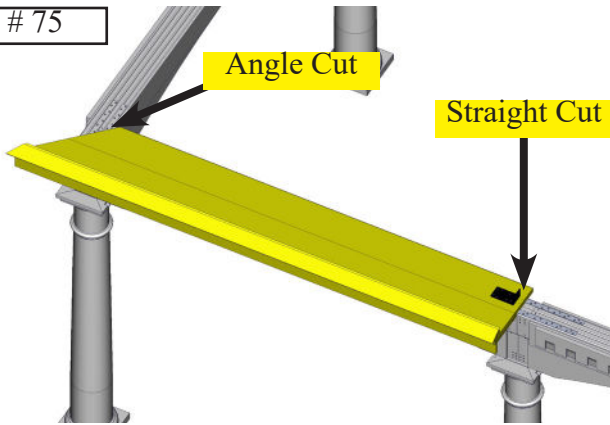


Lift the first Roof Plate onto the Header Assembly.

Step # 76

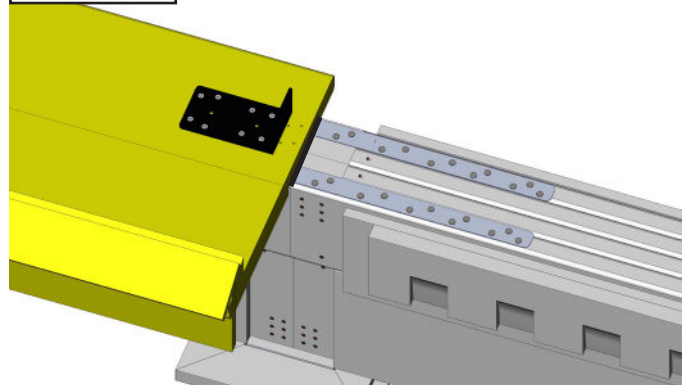


Place the Roof Plate so the straight cut side is aligned with the mark on the Post.

Step # 77

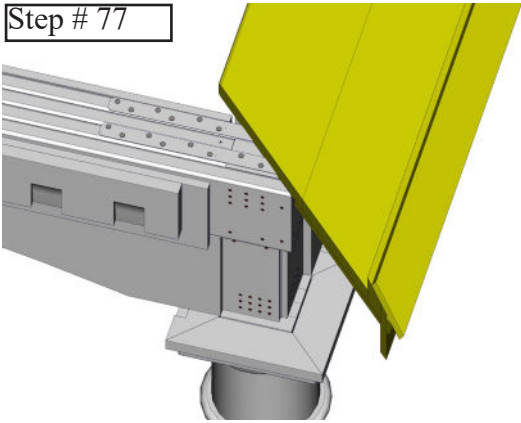


Align the angle cut with the corners of the Corner Post.

Step # 78

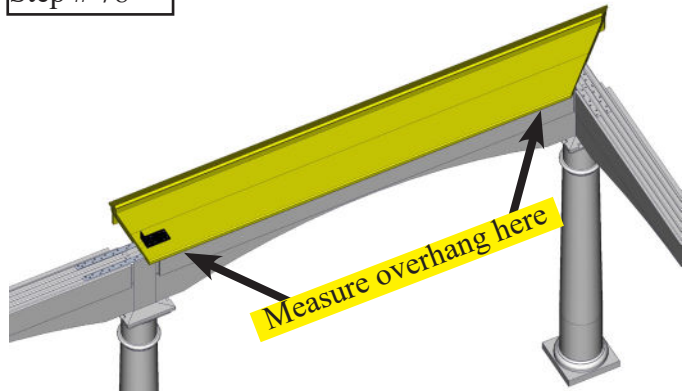


Measure the inside overhang at both ends. While keeping the ends aligned with the mark and Corner Post, adjust Roof Plate to make the overhang the same measurement at each end.

Step # 79

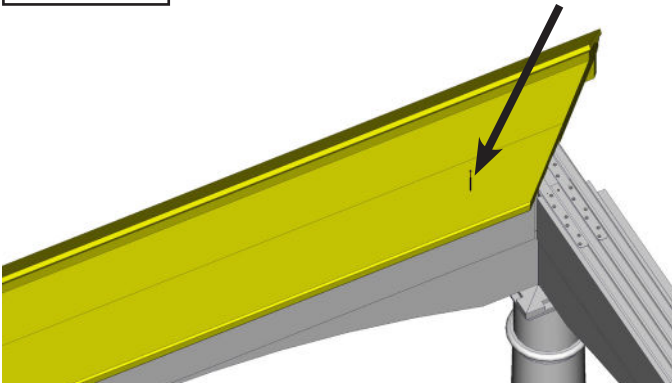

Fasten Roof Plate temporarily at the corner with (1) 3 1/2" Screw into the Header below. This is not pre-drilled.


Step # 80

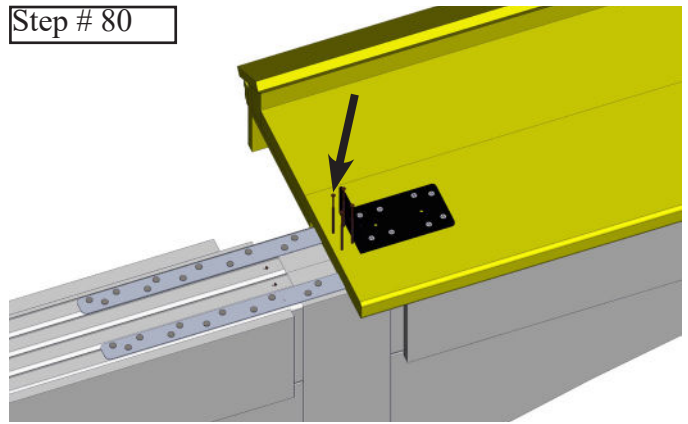

Fasten the opposite end with 3 1/2" Screws through pre-drilled holes as shown.


For unit with 6 or more Post

Step # 81

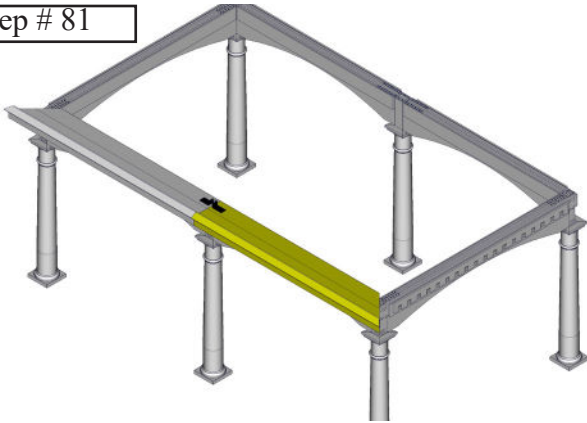


Lift the second Roof Plate onto the Header Assembly.

Step # 82

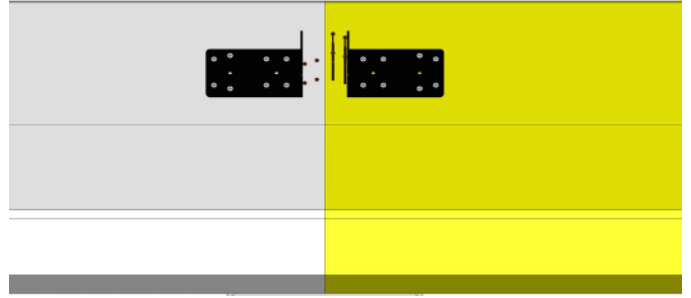


Align the second Roof Plate with the first one and fasten with 3 1/2" Screws through pre-drilled holes.

Step # 83

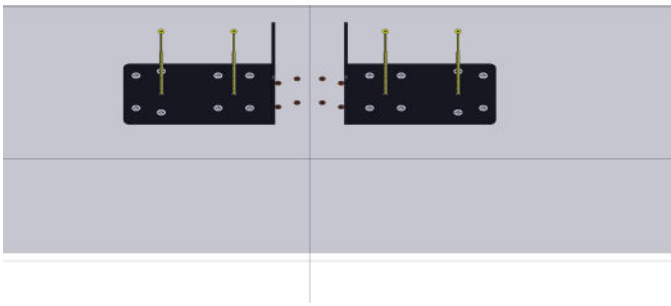


Depending on the size of your Pavilion, there may be some screws left out of the Brackets that are installed on the Roof Plates. If there is screws missing, install 3 1/2" Screws through the holes into the Header below.

Step # 84

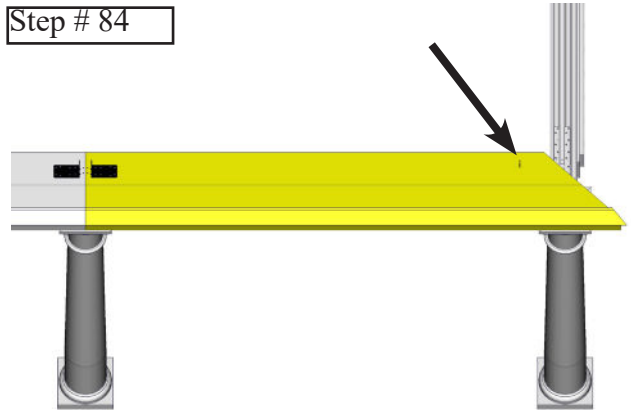


Fasten Roof Plate temporarily at the corner with (1) 3 1/2" Screw into the Header below. This is not pre-drilled.

Step # 85

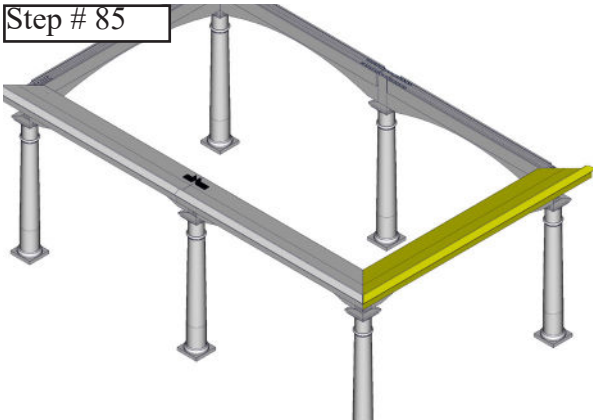

Using previous steps, install the next Roof Plate.


Step # 86

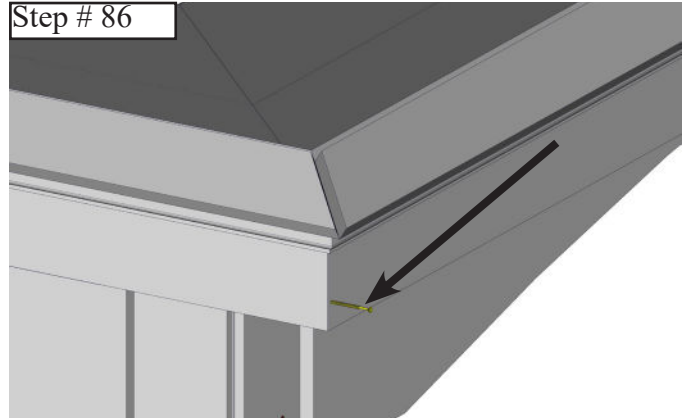

Line up corners evenly. Both vertically and horizontally. Fasten corners of awning together using (1) 2" White Head Screws per corner. That is not pre-drilled.


For unit with 6 or more Post

Step # 87

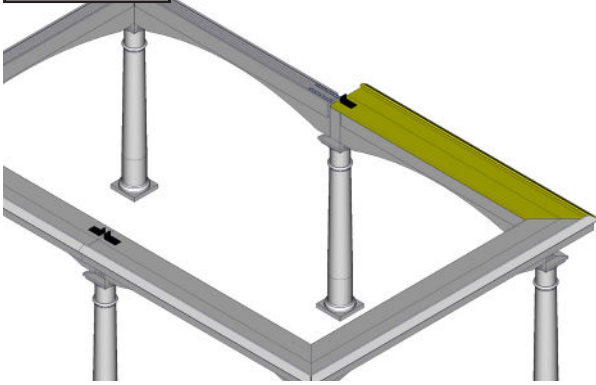


Continue on around installing the Roof Plates.

Step # 88

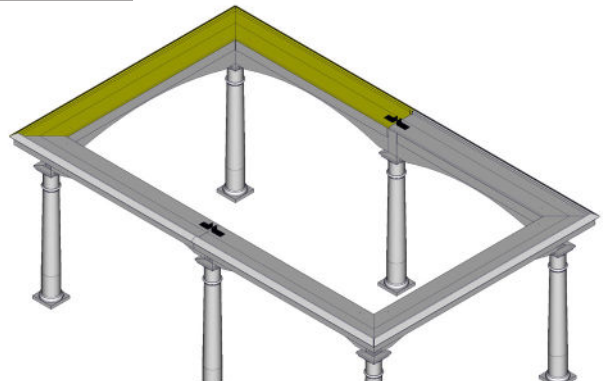

Using previous steps, install the remaining Roof Plates. Be sure to install (1) 2" White Screw at each corner as shown on step 86.

Step # 89

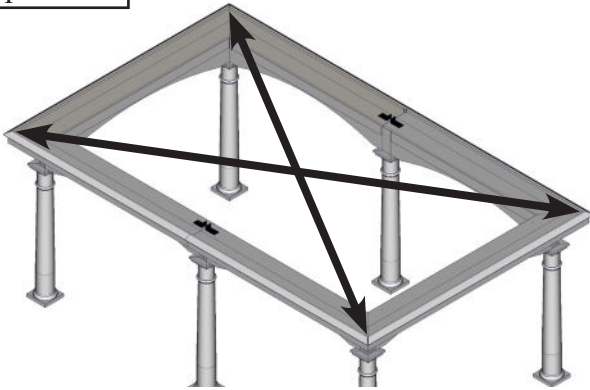

Ensure the pavilion is square by measuring from corner to corner. Adjust pavilion to create equal measurements.

If you purchased a unit with 6 or more Post, skip to page 20. For a unit with only 4 Post, start on next page.

Step # 90



Begin installing Roof Plate by lifting one of the longer sides up first.

Step # 91



Be sure to lift Roof Plate over Header assembly, being careful not to damage the Header assembly.

Step # 92



Place Roof Plate on top of Header Assembly. Align corner edge of Roof Plate with corner of Header assembly as shown. There will be a small space between the White Vinyl Board and the 2x8 Wood Header Board.

Step # 93



Measure the inside reveal on both ends and space equally. Maintain proper alignment at corners.

Step # 94



Fasten Roof Plate temporarily using (1) 3.1/2" Brown Screw at each end in the location shown. This is NOT pre-drilled.

Step # 95



Install adjacent Roof Plate.

Step # 96



Place Roof Plate into position.

Step # 97



Align Roof Plate joints together evenly as shown.

Step # 98




Line up corners evenly.
Both vertically and horizontally.

Step # 99



Fasten corners together using (1) 2" White Head Screw per corner.
This is NOT pre-drilled.

Step # 100

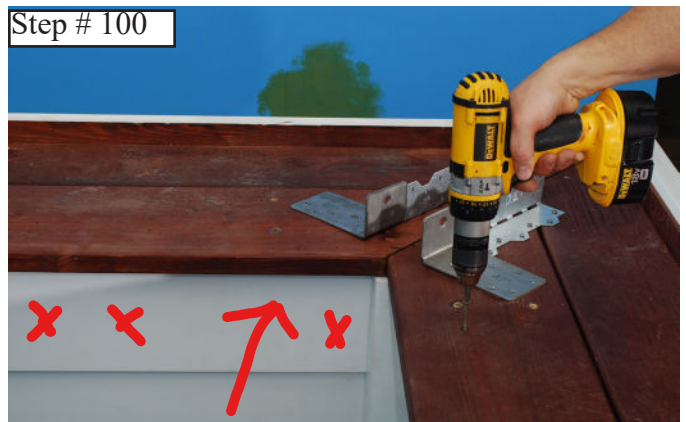

Fasten Roof Plate temporarily using (1) 3.1/2" Brown Screw at each end in the location shown.
This is NOT pre-drilled.

The following is the same for both the 4 post and the 6 or more post units.

Step # 102




Fasten Roof Plate to Header below using a 3/8" x 3.1/2" Lag and a Washer into every pre-drilled hole.

Step # 103



Or use a Power Driven Tool with a 9/16" Socket.

Step # 104

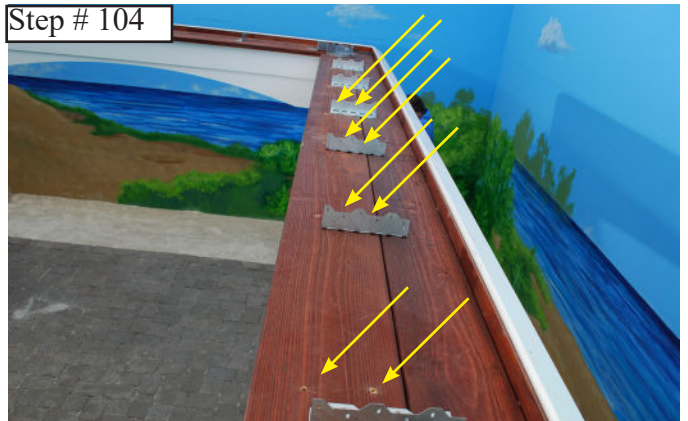

Locations of pre-drilled holes.

For unit with only 4 Post

Step # 105




Install first Double Hip Rafter.
There are (2) Left & (2) Right Rafters.
Be sure to install them in proper corners.

Step # 106



Guide into place between pre-installed Brackets.

Step # 107

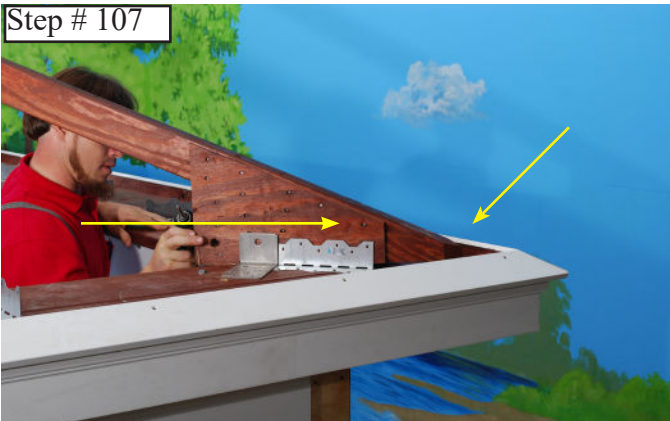


Align Double Hip Rafter into corner.
Slide out against corner.

Step # 108




Attach with (2) 3.1/2" Brown Screws at approx 1"
from end through top down.

Step # 109

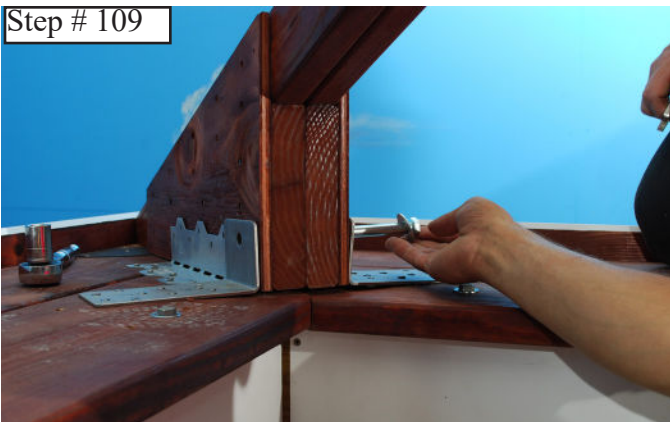


Insert 1/2" x 4.1/2" Bolt and Washer.
Use Washer and Nut on threaded end.

Step # 110

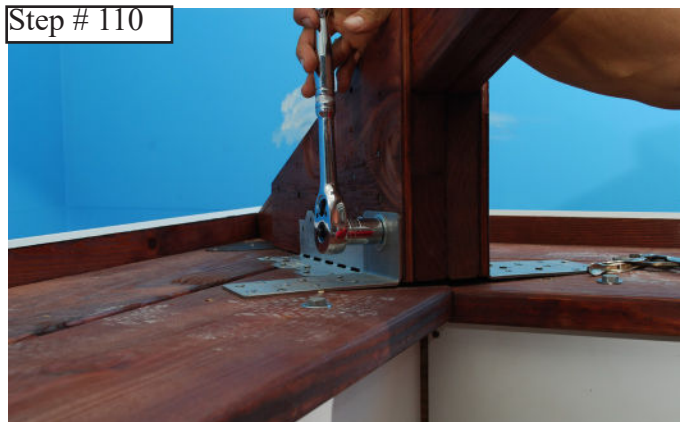

Tighten Bolt with 3/4" Socket.
Install remaining (3) Hip Rafters using previous
steps.

Step # 111

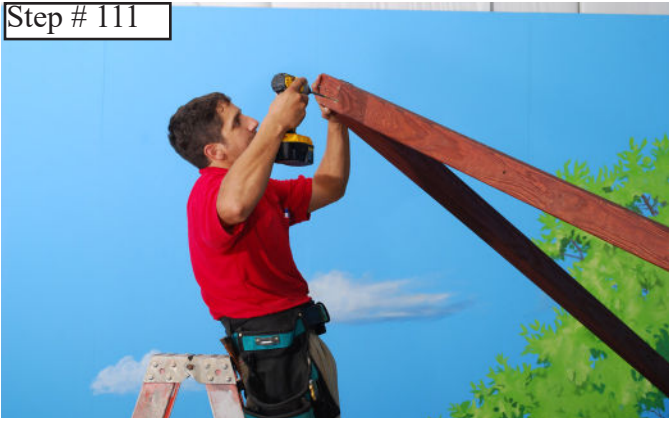

Fasten (2) Double Hip Rafters together using 3.1/2" Brown Screws, (2) from each side.

Step # 112




Finish opposite side.

Step # 113



Install Single Rafters starting with the (4) Longer Center Rafters.

Step # 114

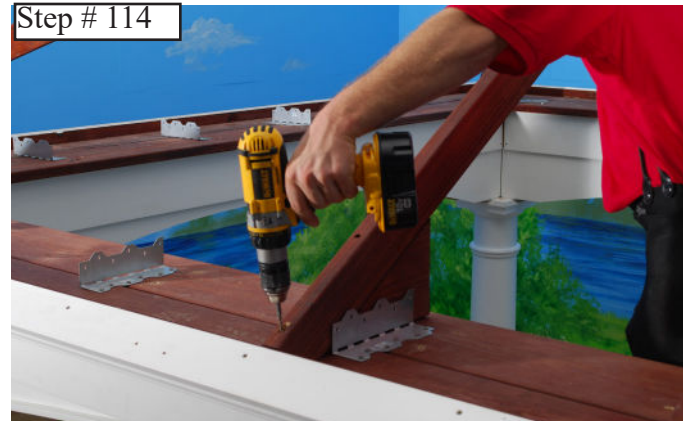


Slide against outside Board and fasten from top down using 3.1/2" Brown Screws.
Do not attach Side Brackets at this time.

Step # 115



Install (4) Center Long Rafters Only.
Note: Smaller sized Pavilions may only have (2) Long Rafters (Long Rafters reach the Top Ridge of the Roof).


Step # 116

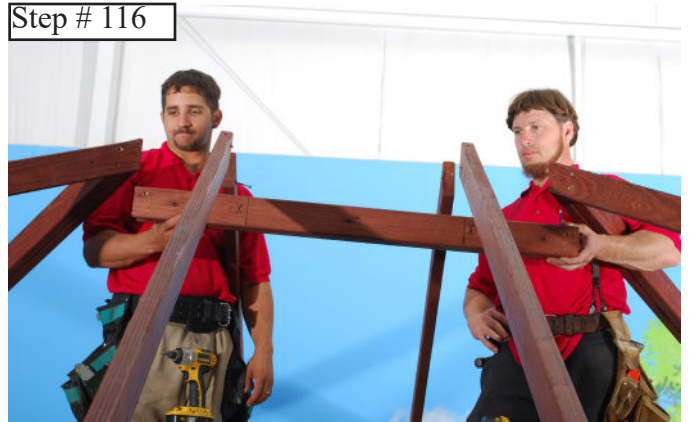

Insert Double Ridge Piece between Hip Rafters and (4) Single Rafters.
Install with nicest side down.

For unit with only 4 Post

Step # 117

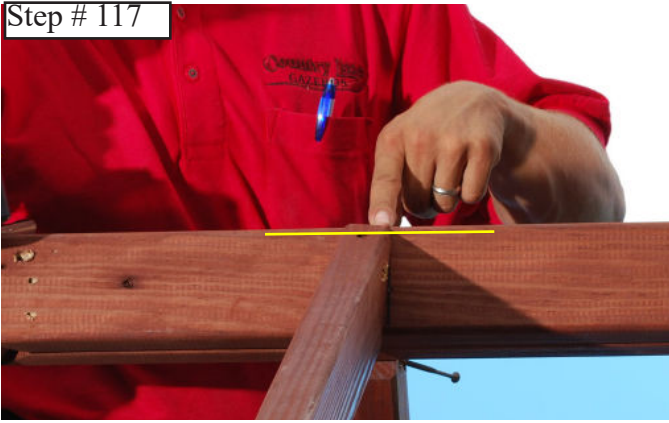

Align Double Ridge Piece with top edge of Single Rafters.

Step # 118




Fasten Single Rafters to Double Ridge Piece using (3) 3.1/2" Brown Screws per connection (toed) through pre-drilled holes.

Step # 119



Align Double Ridge Piece with Hip Rafter as shown. Notice this will make the Hip Rafter a little higher than the Ridge piece. Be sure to align equally on both sides.

Step # 120

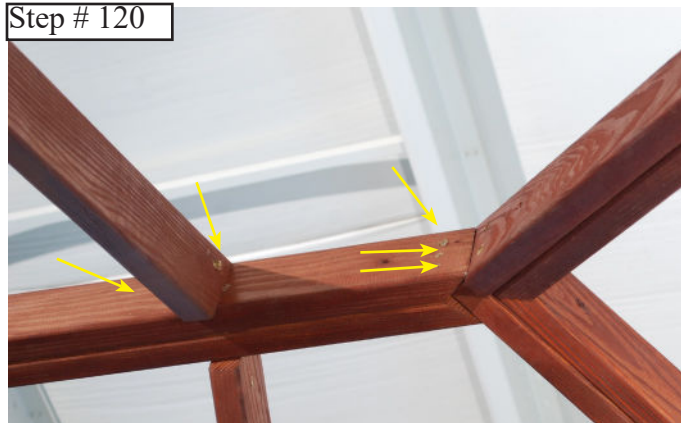


Fasten Double Ridge Piece fters to Double Hip Rafters using 3.1/2" Brown Screws (Toed) through the pre-drilled holes. Ensure you fill all of the pre-drilled holes.

If you purchased a unit with only 4 post, skip to page 27.

For units with 6 or more post, start on next page.


For unit with 6 or more Post

Step # 121

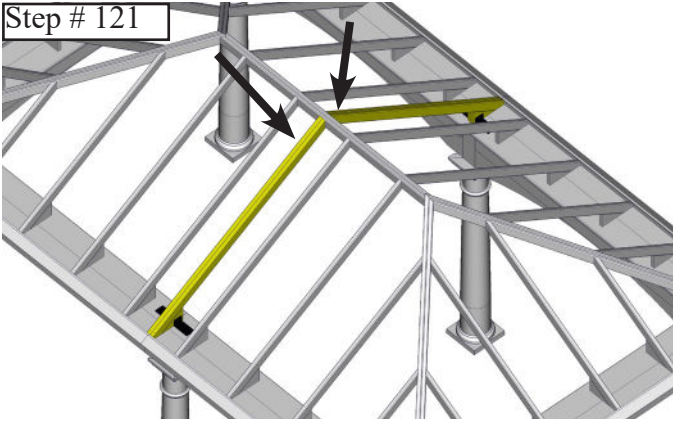


For a unit with 6 or more post, you will have Double Rafters at the Center Post locations. Fasten the Double Rafters to the Ridge with 3 ½" Screws as shown on page 27, step 116 & 117.

Step # 122

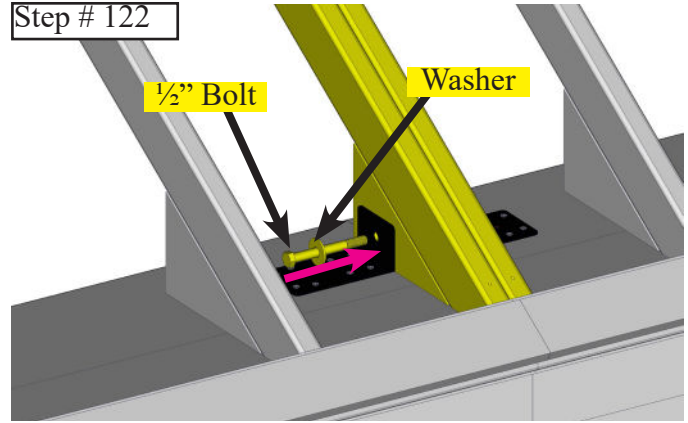


Install the ½" Bolt through the Washer, then through the bracket on the Top Plate all the way through the Double Rafter.

Step # 123

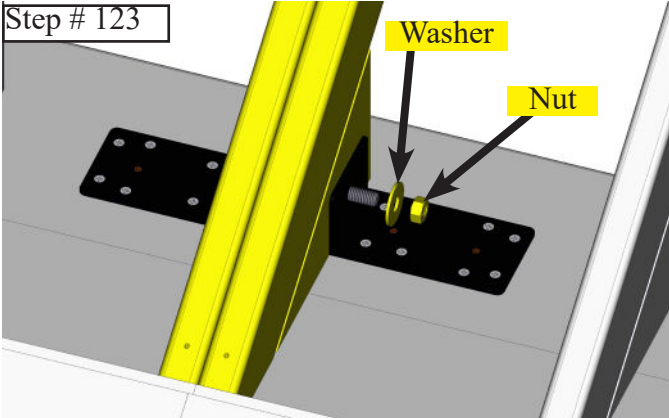


Install the Washer and ½" Nut onto the Bolt on the opposite side.

Step # 124

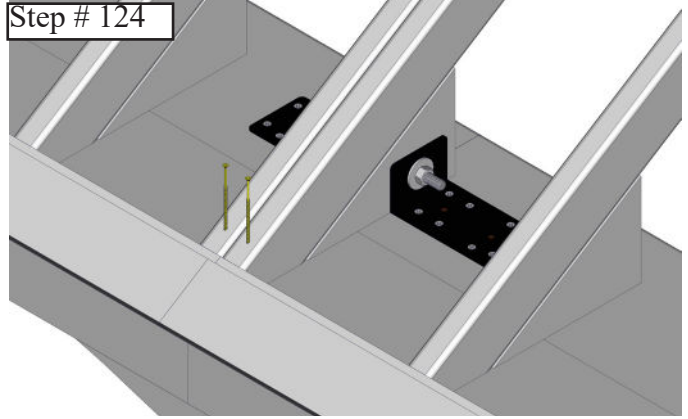


Fasten the Double Rafter to Top Plate with (2) 3 ½" Screws.

Step # 125

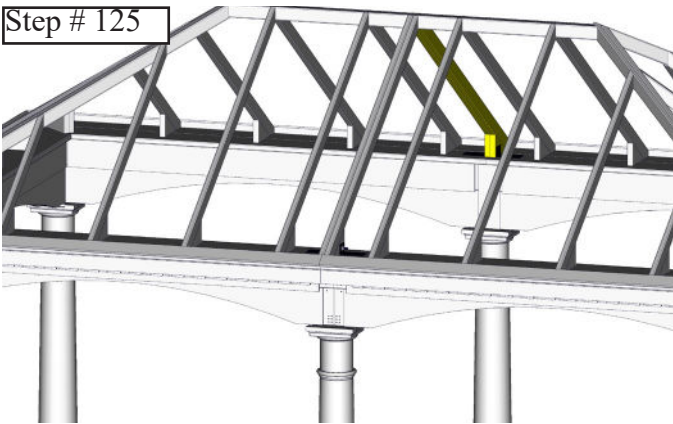

Using steps 120-123, install the remaining Double Rafters.


Step # 126

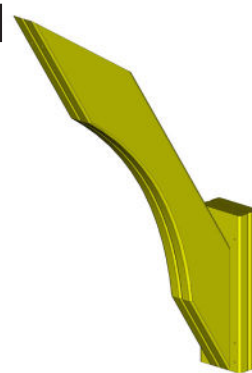

Locate the Knee Brace.


For unit with 6 or more Post

Step # 127

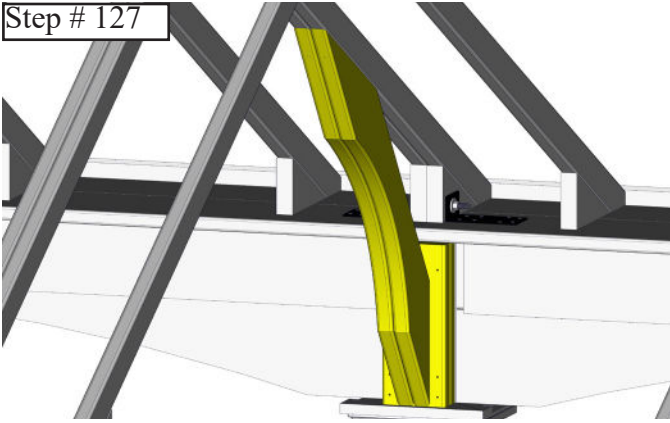


Place the Knee Brace onto the Center Post and up against the bottom of the Double Rafter. Make flush with each side of the Double Rafter.

Step # 128

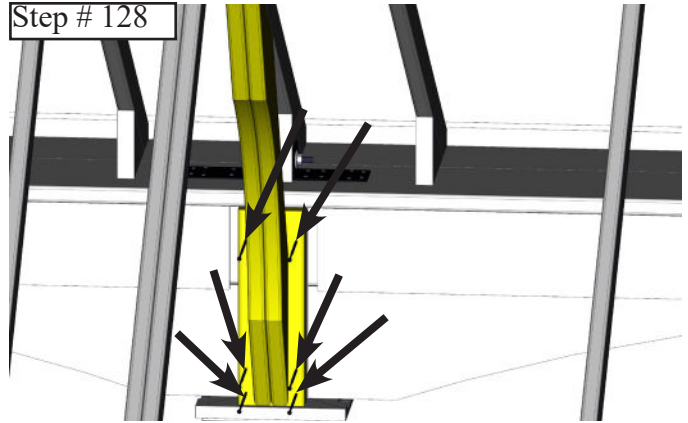


Fasten Knee Brace to the Post with 6" Timber Lock Screws through all pre-drilled holes.

Step # 129

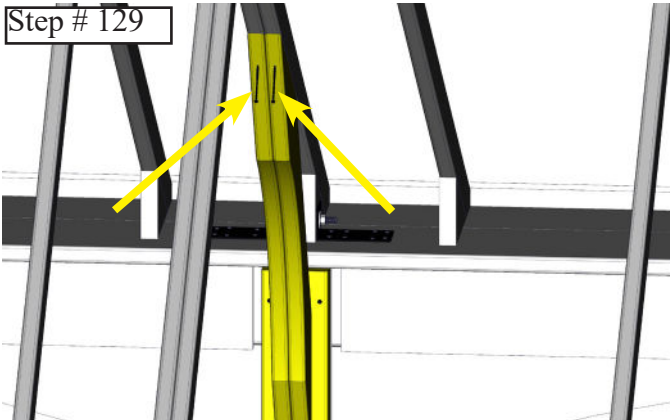

Fasten Knee Brace to the Double Rafter with 4" Timber Lock Screws through all pre-drilled holes.

Step # 130

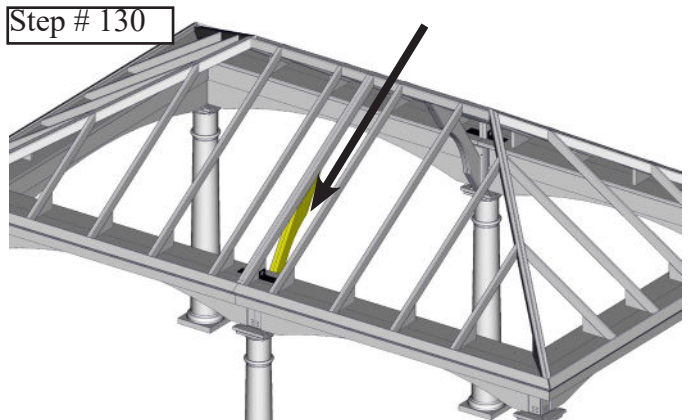


Using steps 126-128, install the remaining Knee Braces at the Center Post locations.

Step # 131




Locate the Collar Ties.

Step # 132

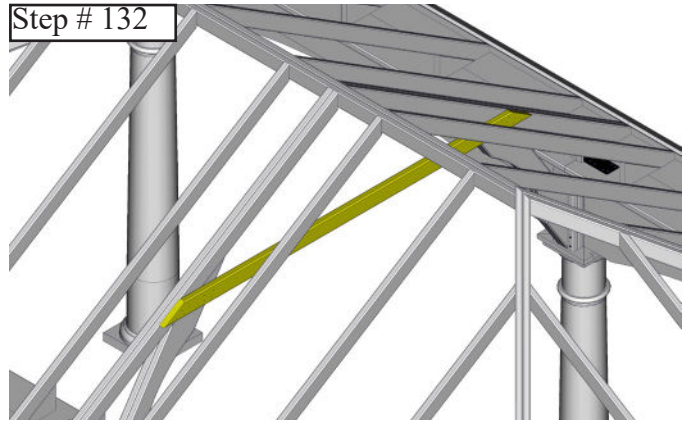


Place the Collar Tie onto the side of the Double Rafters.

Step # 133

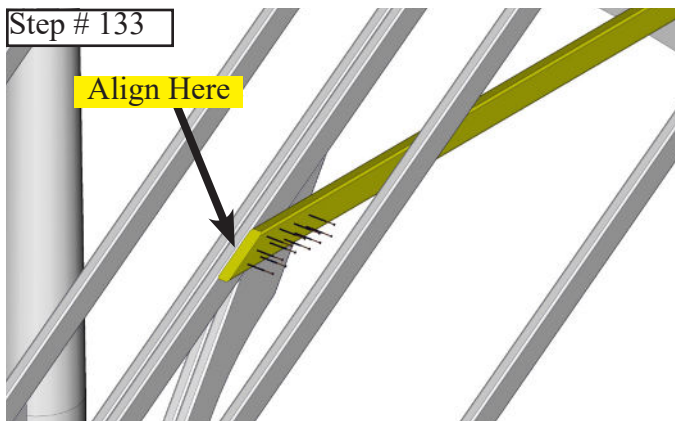

Align the Collar Tie with the top of the Double Rafters at each end. Fasten Collar Ties to Double Rafters and to Knee Brace at each end with 3 1/2" Screws through all pre-drilled holes.


Step # 134

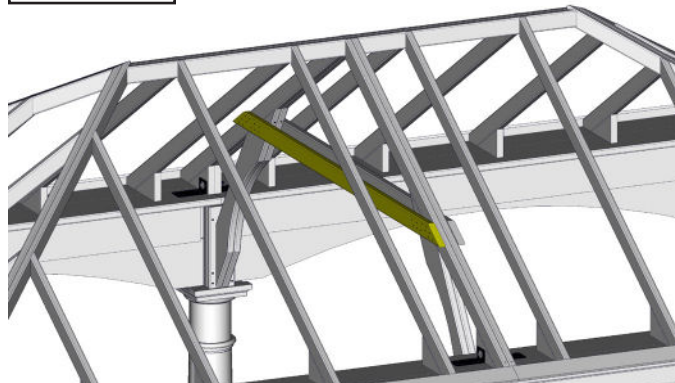

Using steps 131-133, install the second Collar Tie on the opposite side of the Double Rafter.

Continue on next page for both the unit with only 4 Post, and the unit with 6 or more Post.

Step # 135

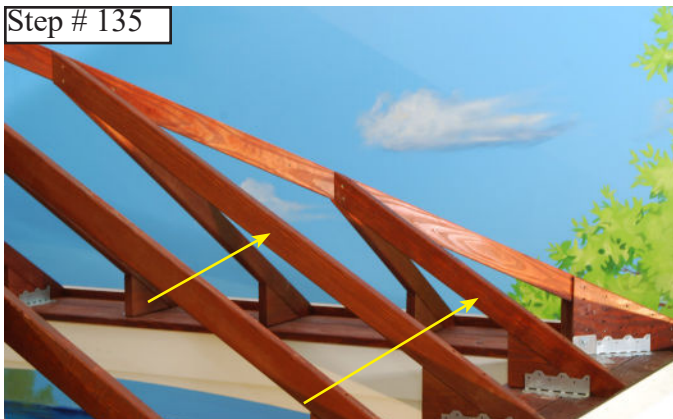


Place remaining Single Rafters into place.

Step # 136



Attach Single Rafter to Hip Rafter using (2) 3.1/2" Brown Screws per connection. Then fasten with (1) 3.1/2" Brown Screw at approx 1" from end through top down.

Step # 137

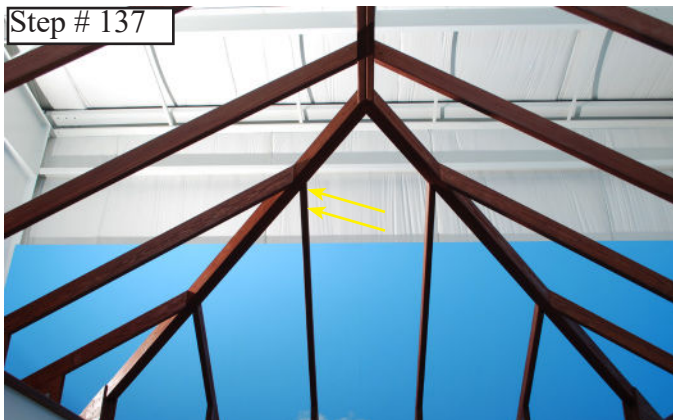

Step # 138



Fasten pre-installed side L Brackets to Single Rafters and Double Hip Rafters using 1.1/2" Screws.

Step # 139



Be sure to fill every Bracket hole. Use (6) Screws per Bracket filling every hole.

Step # 140



At this point you should have all Rafters installed. Note: If you purchased a longer or shorter Pavilion there will be more or less Single Rafters based on the size and spacing.

Step # 141




Drill a 1/2" hole through the Top Plate directly below the double Rafter on slight angle towards the corner.

Step # 142



Drill hole down through center of Rafters above hole you drilled in Top Plate.

Step # 143

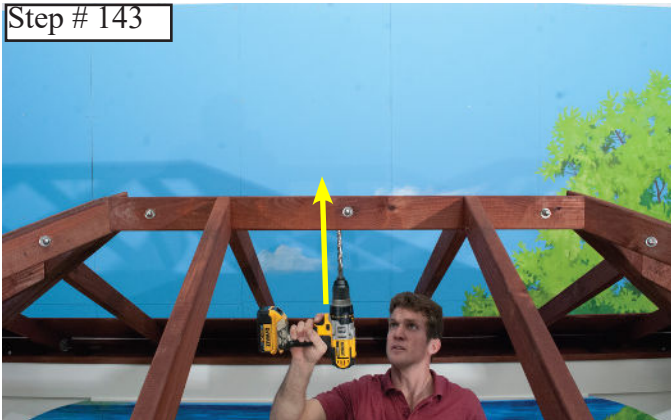


Drill hole through center of Top Ridge.

Step # 144



Feed Wire though Top Plate and Double Rafters.

Step # 145

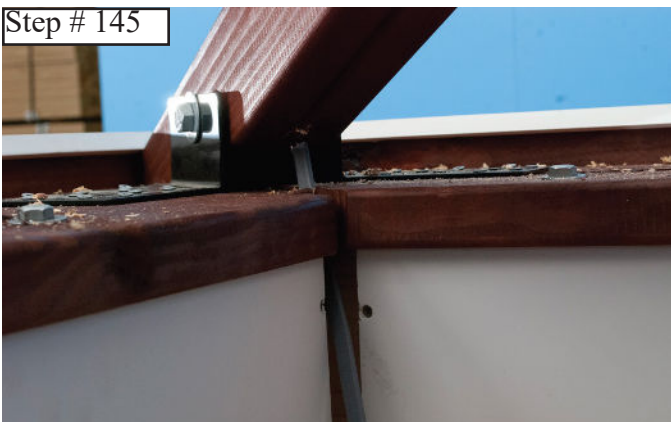

Angle Wire and feed through Corner Rafter.

Step # 146



Pull Wire out through hole in Corner Rafter.

Step # 147



Layout 1x6 T&G Roof Boards.

For smaller Pavilions there will be (4) packs, (1) for each side. Units 16' and Larger get (2) or more packs per side. Be sure not to mix up packs.

Step # 148



Install 1x6 Roof Boards starting at the bottom with the longest board first.

Step # 149



16' and larger Pavilions will require (2) Boards for the first couple rows.


Align Roof Boards close to center of Double Rafters. (Yellow Arrows)

Step # 150



Fasten to Rafters using 2" Hand Nails (2) per Rafter. You can use a 2" Power Stapler or Nailer. Note: You will have to supply your own nails for your specific nailer.

Step # 151

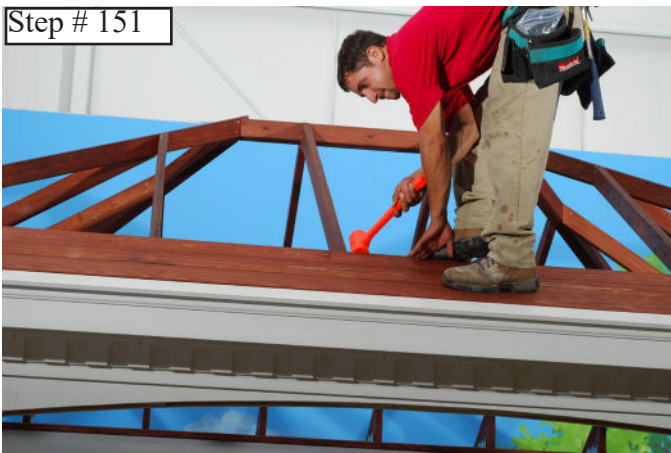

Tap following rows into place using a rubber mallet. To not tap with a regular hammer you may damage the tongue.

Be sure to insert the T&G Joints completely.

Step # 152



Continue with the next row of boards, each board will be a bit shorter than the one before. All boards are pre-cut to fit.

Step # 153



Continue up the Roof.

Step # 154



Finish all (4) sides using previous steps.

-If you added an Electrical Package continue here. If not, skip to page 6-

Step # 155



Feed Wire between T&G Boards up the Ridge.

Step # 156




Run Wire across Top Ridge and feed end of Wire down through hole in Top Ridge.

Step # 157




Fasten Inside Corner Trim using (1) 2.1/2" White Head Screw angled away from the Electrical Wire.

Step # 158

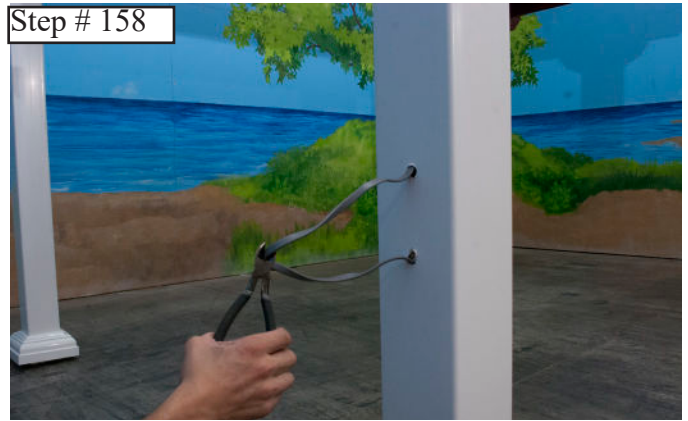


After Installation of Pavilion, untwist Wire and cut Wire in half.

Step # 159

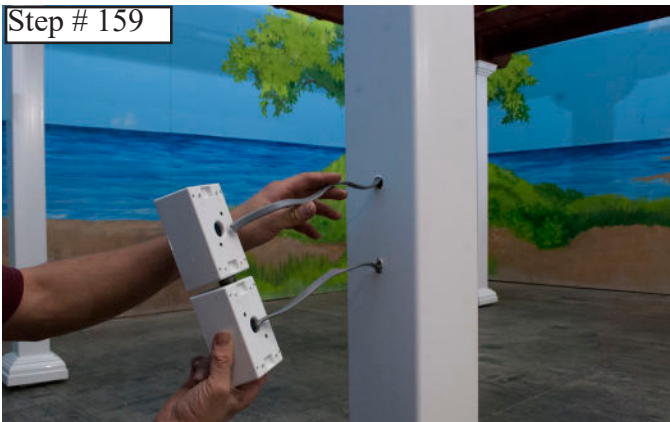

Slide Electrical Box Assembly over installed Wire.

Step # 160

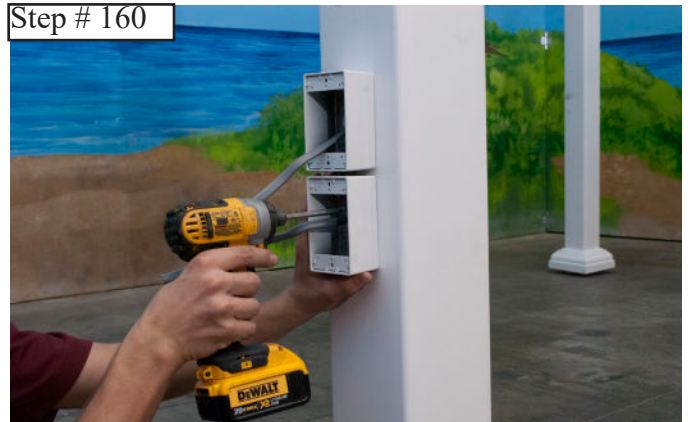

Attach Boxes to Post using 2.1/2" Screws through (4) pre-drilled holes in Boxes.

Step # 161



Install Roofing Paper using a Hammer stapler.

Step # 162



Roll across roof. Attach with stapler and cut evenly with corner of Roof.

Step # 163



Roll out on 2nd row overlapping approximately 2".

Step # 164



Continue until complete. Be sure to add enough staples as to keep the Roofing Paper from shifting under your feet.

Step # 165



To install 1st row of Shingles, turn Shingle upside down with black tar line at bottom edge facing up, and attach to Roof using (4) 3/4" Roofing Nails. Place Nails approximatly 3" from bottom.

Step # 166



Attach second row of Shingles to Roof using 3/4" Roof Nails provided, or a Power Stapler. Do not use long Nails or Staples that protrude through 1x6 T&G Roof Boards.

Step # 167



Use (4) 3/4" Roofing Nails and attach to Roof through Shingle at the center line marked on the Shingle. Do not fasten below the line or your fasteners will be exposed.

Step # 168




Trim corner Shingles using Shingle Scissors or a Utility Knife. When using a knife cut on the bottom side.

Step # 169




Start second row, line up bottom of Shingle with the architectural line on the Shingle below.

Step # 170

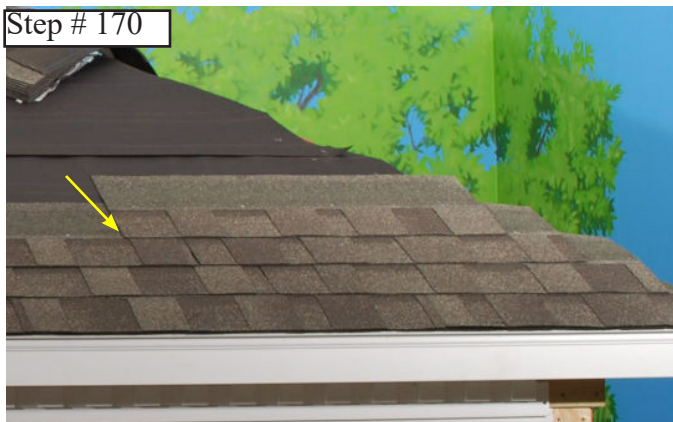

Also see instructions on Shingle package.

Step # 171

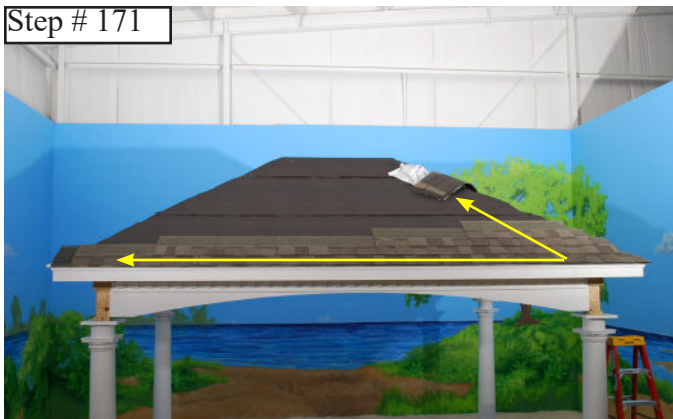

Continue on up to the top working across then up.

Step # 172



Finish all (4) sides using previous steps.

Step # 173



Capping the Ridge.
Start 1st Capper centered on Ridge down past corner.

Step # 174



Fasten using (2) 1" Roof Nails per Capper.
Fasten Nail through black tar strip.

Step # 175



Place second Capper into place.

Step # 176



Align bottom of 2nd Capper with small groove of the Capper below it. Leave approx 5" exposure to the weather.

Step # 177



Fasten using (2) 1" Roof Nails, (1) per side.

Step # 178



Continue up the Ridge using the same previous steps.

Step # 179



Trim the Top.

Step # 180



Start at both ends of Ridge and work toward the center of the Ridge.

Step # 181



Last piece will need cut in half and will bring the corners together.

Step # 182



Trim the bottom edges using Shingle Scissors or a Utility Knife.

Step # 183




Install the Cupola.
Place the Cupola on the center of the Roof.
Measure both sides to ensure the Cupola is centered.

Step # 184




Fasten Cupola to the Roof using (4) 2.1/2" White Screws.

Step # 185

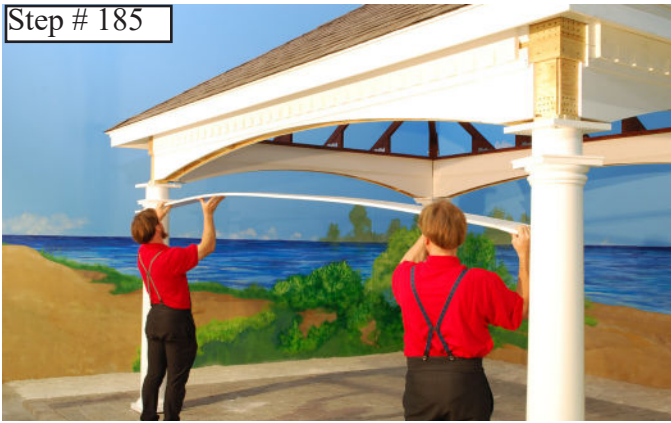

Install Arch Cover.

Step # 186

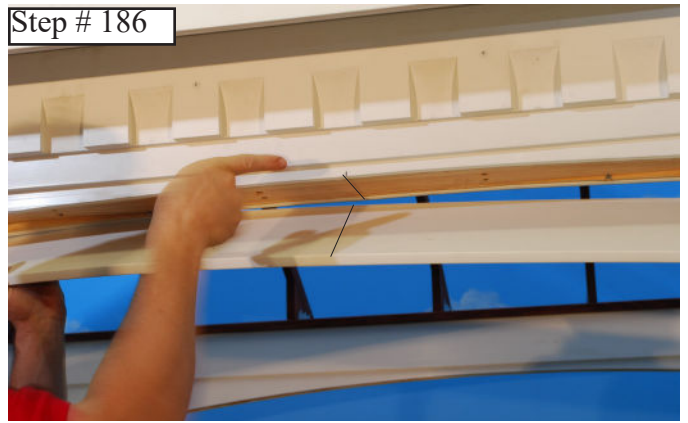

Align center of Arch Cover (marked with a pencil line) to Center of Arch (marked with a pencil line).

Step # 187



Measure reveal of Arch Cover inside and outside.
Center Arch Cover and fasten using 2" White Screws through each pre drilled holes.

Step # 188



Working from the center toward the outside corners.
Check your measurements as you go and attach with 2" White Screws through all pre-drilled holes.

Step # 189



Fold end up under the Square Trim Piece at the Post. Install all remaining Arch Covers.

Step # 190



Install Outside Corner Cover.

Step # 191



Slide Outside Corner Cover up against the Roof.

Step # 192



Fasten Outside Corner Cover to Post using (2) 3.1/2" White Screws at locations shown, these holes are not pre-drilled.

Step # 193



Install the Inside Corner Cover.

Step # 194



Fasten toward the top with (1) 3.1/2" White Screw.

Step # 195



Fasten Square Trim Piece below the Header using (2) 2.1/2" White Head Screws. Angle up and into Post, (1) per Header side.

Step # 196



Fasten Square Trim Piece to Outside & Inside Corner Covers using (1) 2./12" White Head Screw per corner, these are not pre-drilled.

Step # 197



Be careful to aim Screw correctly into Trim Cover above.

Step # 198



Attach Post Top Trim to Square Trim piece using (4) 2" White Pan Screws, (1) at each corner, these are not pre-drilled.

Step # 199



Using the provided Pint of Stain or Paint, touch up any area that may have become scratched during installation.

Step # 200



Using the provided Mr. Clean Sponge, dampen with water and use on all vinyl areas to clean any scuffs or dirt that may have happened during installation.

Step # 201



When attaching your Pavilion to your Patio, Ensure you attach it to a solid structure. (I.e. Concrete Base, Concrete Pad, Deck etc. Do not attach to Pavers alone. Pavers will not hold your Pavilion down in high winds)

Step # 202



First lift Post Base Trim up and away from Brackets. Using a Hammer Drill and a 1/2" Drill Bit (Not Included). Drill into the Patio.

Step # 203



Insert and tighten 1/2" Lag Bolt. After tightening Bolt lower Post Base Trim into place.

Step # 204



Make a mark at the tab location of the Post Base Trim. Make sure it is turned at proper angle.

Step # 205



Using a 1/2" Drill Bit, drill a hole 1/2" deep.

Step # 206



Finish by placing Tabs into the newly drilled holes.



Enjoy your New Pavilion!